


PUSH AND LOCK STUD

**S.S. T316
MACHINED**

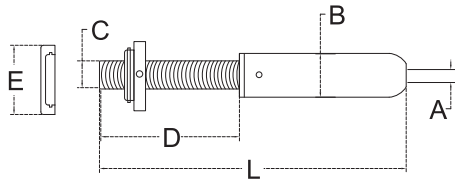

new

ITEM	A (Cable)	B	C	D	E	L	WT (lb)
816S-03	1/8"	0.43"	5/16"	1.50"	0.70"	3.15"	0.10

This fitting require "NO SWAGE TOOL" at all, simply push the cable in to it and lock.